



## G-Dash Release history

---

| Version         | Date          | Change/additions  |
|-----------------|---------------|---|
| <b>57.01.28</b> | Jul 3rd 2015  | <ul style="list-style-type: none"><li>■ GPS speed measure with 1 decimal place on the display</li></ul>   |
| <b>57.01.26</b> | Apr 21st 2015 | <ul style="list-style-type: none"><li>■ Increased limit of maximum alarm events till to 56 simple alarm conditions</li></ul>  |
| <b>57.01.22</b> | May 21st 2014 | <ul style="list-style-type: none"><li>■ Fixed "Led Intensity" message in "LED Intensity"</li><li>■ Removed "Disable/Enable Shift Light"</li><li>■ Reversed "Down" and "Up" buttons in the menu functions</li></ul>  |
| <b>57.01.18</b> | Sep 19th 2013 | <ul style="list-style-type: none"><li>■ Added in "SmartyCam page" the information from SmartyCam HD</li></ul>   |
| <b>57.01.17</b> | Sep 3rd 2013  | <ul style="list-style-type: none"><li>■ Added the "RPM drop recall screen" and menu configuration relative</li></ul>  |
| <b>57.01.14</b> | Jun 11th 2013 | <ul style="list-style-type: none"><li>■ Added the name of measures in the RPM page</li><li>■ Modified the logic of the alarm configured as "Until the button is pushed": now the alarm disappears pushing the button also if the measure is yet in alarm</li><li>■ Fixed some minor bugs in menu management</li></ul> |
| <b>57.01.08</b> | Feb 26th 2013 | <ul style="list-style-type: none"><li>■ Fixed bug on the gear calculated visualization in the custom page</li><li>■ Fixed bug on the display visualization of the 0-50 mV and 0-500 mV sensors</li><li>■ Added exit from the warning display message when the Slave Configuration is not correct</li></ul>            |
| <b>57.01.06</b> | Feb 8th 2013  | <ul style="list-style-type: none"><li>■ First official version</li></ul>  |