

When copy ends, you will see the following screen (fig.3)

Click "Yes" and wait for the Update Process to complete.

Important:
don't turn your PC off while the update process is running



When the update process is over, you will see the following screen (fig. 4)

Press "Exit", disconnect your Data Key from your PC, and connect it to your MyChron 4. The update process will start and complete automatically

MY4 DATAKEY

MYCHRON 4 FIRMWARE UPGRADE PROCEDURE



AIM Srl
Via Cavalcanti, 8
20063 Cernusco S/N (Mi)
Italia
Tel. (+39) 02-9290571
Fax (+39) 02-92118024
www.aim-sportline.com
www.mychron4.com

Please check MyChron4 manual for data key download

Enter the **www.mychron4.com** website.

Go to the Download page, and check that the available version is more recent than the one installed on your Datalogger

To check your Mychron4 firmware version, turn your device on and go to:


Menu – Configuration – System Configuration – System Info.

If the site version is higher than the one installed on your Mychron 4, please connect your DataKey to the PC's USB port, download the firmware by clicking "Download Firmup MyChron4 xx.xx version" (where xx.xx is intended as the most recent version number).

(fig.1)



Click the "Save" button and, when the download is over, click "Run"

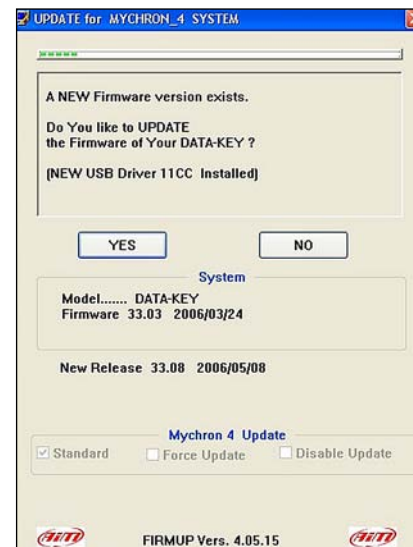

The following screen will appear (fig.2)

Please confirm by pressing "Yes" and wait for the copy process to be successfully completed.